

# Thule Rapid System Kit 1157

# > Instructions





**INFINITI i30**, 4-dr Sedan, \*00-01

**INFINITI i35**, 4-dr Sedan, \*02-05

**NISSAN Cefiro**, 4-dr Sedan, 99-03

**NISSAN Maxima**, 4-dr Sedan, 00-03

\*North America

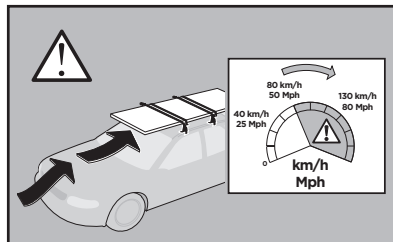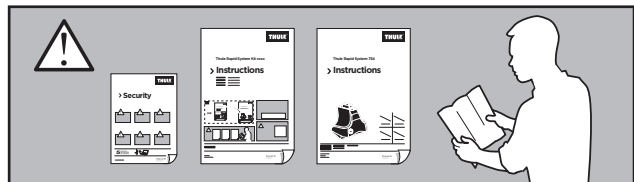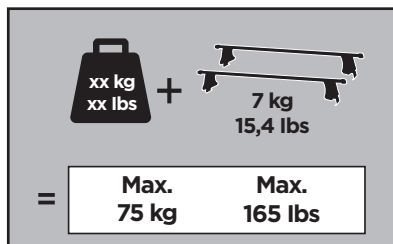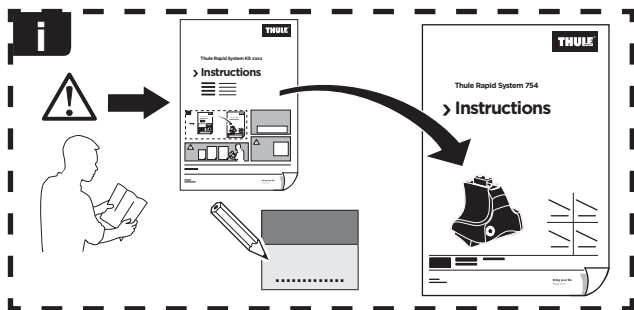



ISO 11154-E

141157

C.20130107  
519-1157-02

Bring your life

thule.com

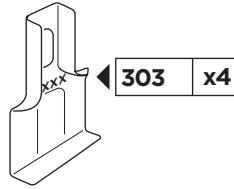



x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>INFINITI i30</b> , 4-dr Sedan, *00-01	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>INFINITI i35</b> , 4-dr Sedan, *02-05	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>NISSAN Cefiro</b> , 4-dr Sedan, 99-03	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>
<b>NISSAN Maxima</b> , 4-dr Sedan, 00-03	<b>32,5</b>	<b>976</b>	<b>38 <sup>3</sup>/<sub>8</sub></b>

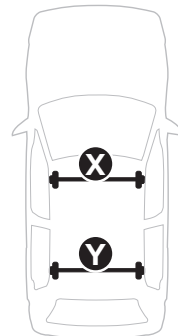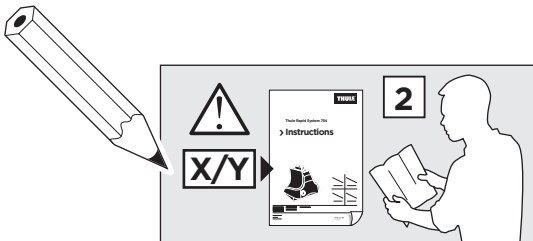

	Y (scale)	Y (mm)	Y (inch)
<b>INFINITI i30</b> , 4-dr Sedan, *00-01	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>
<b>INFINITI i35</b> , 4-dr Sedan, *02-05	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>
<b>NISSAN Cefiro</b> , 4-dr Sedan, 99-03	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>
<b>NISSAN Maxima</b> , 4-dr Sedan, 00-03	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>



# 2

**INFINITI i30**, 4-dr Sedan, \*00-01


**INFINITI i35**, 4-dr Sedan, \*02-05

**NISSAN Cefiro**, 4-dr Sedan, 99-03

**NISSAN Maxima**, 4-dr Sedan, 00-03

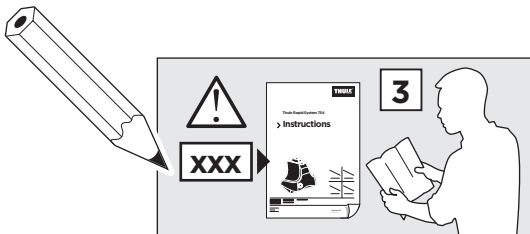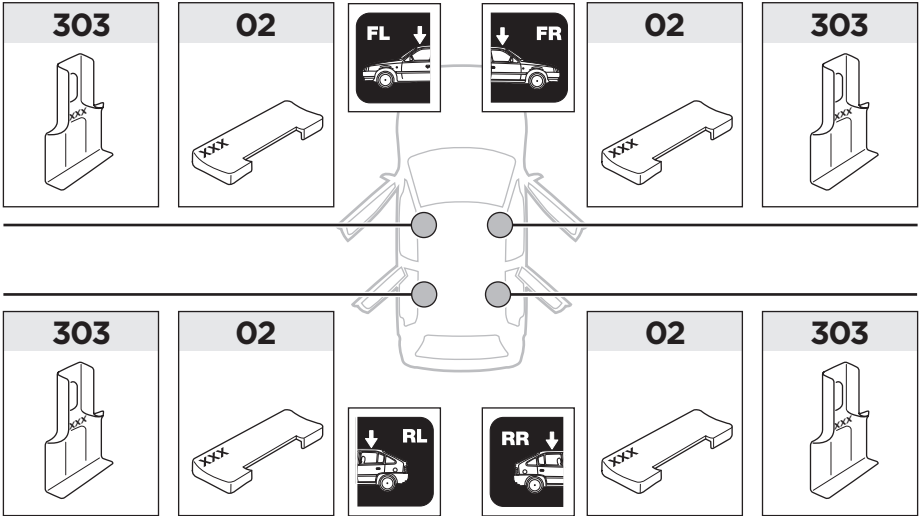

3

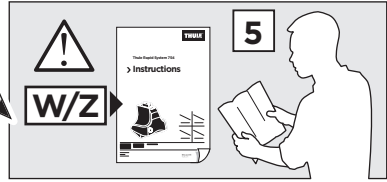

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>INFINITI i30</b> , 4-dr Sedan, *00-01	230	650	9	25 <sup>5</sup> / <sub>8</sub>
<b>INFINITI i35</b> , 4-dr Sedan, *02-05	230	650	9	25 <sup>5</sup> / <sub>8</sub>
<b>NISSAN Cefiro</b> , 4-dr Sedan, 99-03	230	650	9	25 <sup>5</sup> / <sub>8</sub>
<b>NISSAN Maxima</b> , 4-dr Sedan, 00-03	230	650	9	25 <sup>5</sup> / <sub>8</sub>

